

# LIST OF THE COMPONENT PARTS OF THE MAB AUTOMATIC PISTOL

Model F

- |                            |  |
|----------------------------|--|
| 1 Barrel                   | 26 Breech block pin                              |
| 2 Slide                    | 27 Barrel fixing pin                             |
| 3 Action frame             | 28 Rearsight                                     |
| 4 Magazine Spring          | 29 Extractor spring                              |
| 5 Hammer spring with guide | 30 Ejector                                       |
| 6 Recoil spring            | 31 Magazine catch                                |
| 7 Trigger                  | 32 Sear axis pin                                 |
| 8 Magazine                 | 33 Barrel fixing pin                             |
| 9 Hammer                   | 34 Bolt and spring bolt of facultative safety    |
| 10 Recoil spring guide     | 35 Magazine stop spring                          |
| 11 Hammer bolt             | 36 Extractor                                     |
| 12 Magazine spring guide   | 37 Handle plate screw                            |
| 13 Firing pin              | 38 Magazine stop axis                            |
| 14 Right handle plate      | 39 Extractor driver                              |
| 15 Left handle plate       | 40 Bolt and spring bolt of the dismantling stud  |
| 16 Breech block            | 41 Sear spring                                   |
| 17 Magazine stop           | 42 Handle plate screw                            |
| 18 Sear                    | 43 Hammer axis pin                               |
| 19 Trigger bar             | 44 Bolt and spring bolt for the trigger retainer |
| 20 Magazine platform       | 45 Firing pin spring                             |
| 21 Dismantling stud        | 46 Firing pin spring retainer                    |
| 22 Safety                  | 47 Obturator of the facultative safety spring.   |
| 23 Trigger retainer        |  |
| 24 Foresight               |  |
| 25 Magazine safety & spin  |  |

## MANUFACTURE D'ARMES AUTOMATIQUES

Allées-Marines BAYONNE (B.-P.)

Tél. 517.53

22 LONG RIFLE ONLY

Explanation notice

For the :  
Working  
Dismantling  
Reassembling  
List of spare parts of the

AUTOMATIC PISTOL

# MAB

Model F



# MAB

## AUTOMATIC PISTOL

### Model F

Total length of the pistol 11.28 in.  
Barrel length ..... 4.20 in. or 6.12 in. or 6.92 in.  
Weight ..... 27.80 oz. or 30 oz. or 3.1 oz.

This pistol is provided with stud to permit single shot firing. It is then necessary to pull back the slide for each shot. With the stud in its normal position, the pistol fires automatically.

### WORKING

#### 1° SAFETIES

The pistol has 2 safeties :  
— one is the ordinary side safety,  
— the other is automatic.

The automatic safety locks the mechanism when the magazine is removed from the pistol.

#### 2° MAGAZINE

The capacity of the magazine is of 9 cartridges.

When loading the magazine, care should be taken to see that the cartridges are correctly placed, so that the rim of each cartridge is in *front* of the rim of the cartridge underneath.

Place the magazine in the pistol.

Draw the slide backwards and allow it to jump forward quickly.

Notice if the slide is completely forward.

#### 3° UNLOADING

a) Remove the magazine by pressing on the magazine catch at the base of the grip.


b) Draw the slide sharply to the rear so as to remove the cartridge which may be in the chamber.

#### IMPORTANT


Well oil the inside of the chamber before shooting. Clean the chamber after every 2 magazines with an oily mop. Clean the barrel and the slide after use.

## DISMANTLING

1° Place a point in the hole in the dismantling stud, press and raise the stud.

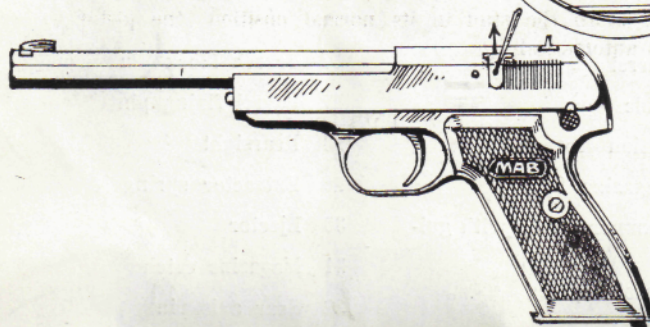


## REASSEMBLING

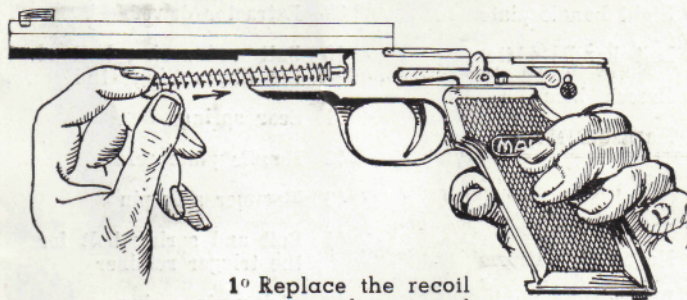



1° Replace the recoil spring, the pointed end of the guide towards the breech.



2° Hold the pistol in the left hand, draw the slide backwards to its full extent.

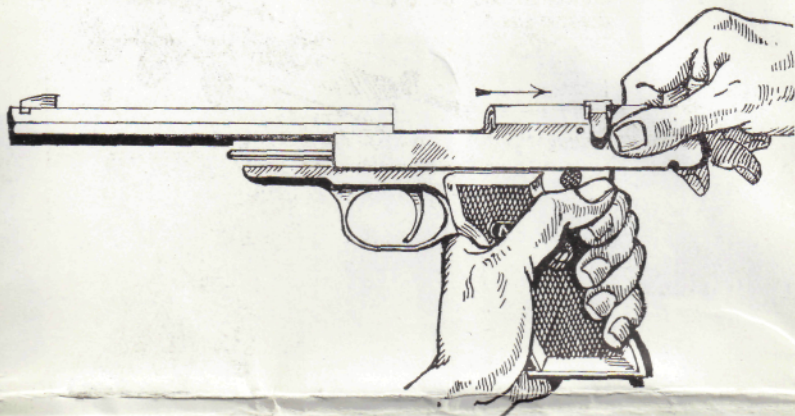

3° Now raise the slide and allow it to move forward and become disengaged.

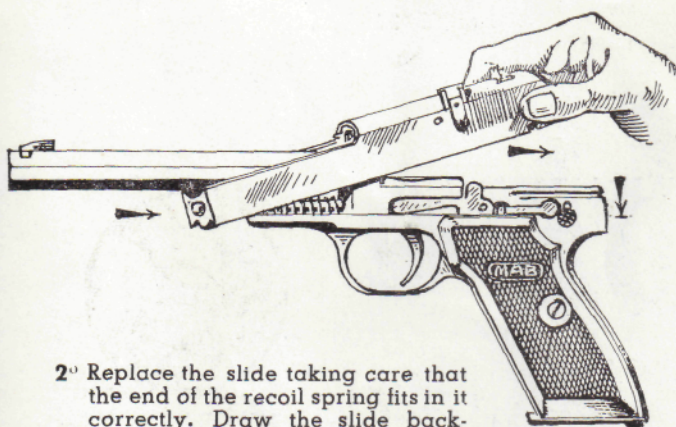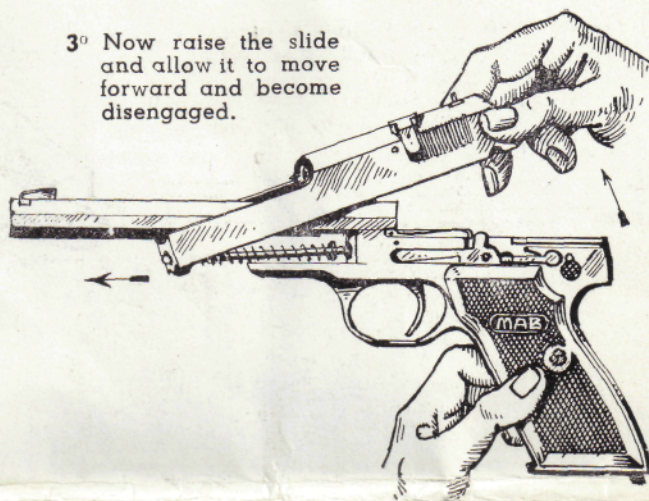

2° Replace the slide taking care that the end of the recoil spring fits in it correctly. Draw the slide backwards and lower it to its original horizontal position and allow it to slide forward.



3° Press down the dismantling stud.



